




Better Bath
COMPONENTS

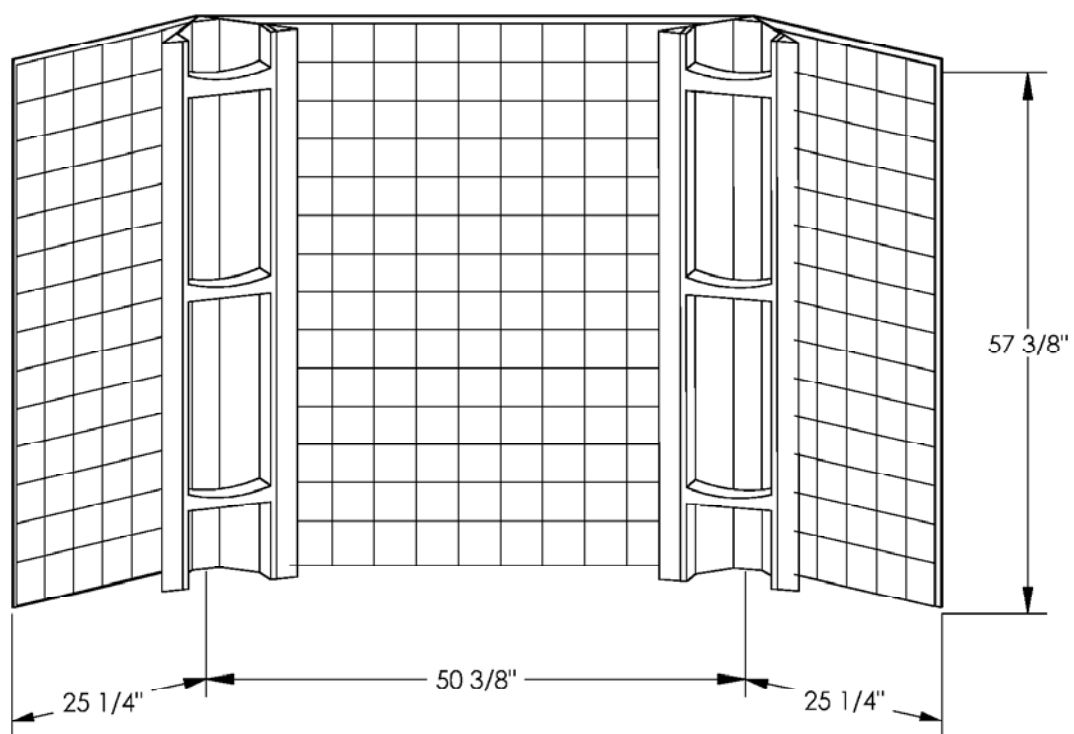

- 1) Surround is for 27"x54" and 30"x60" tubs
- 2) 260C Caddies required - sold separately

CWS-27STD

Multi-Piece Surround

Better Bath Components

CWS Multi-Piece Surround

Installation Instructions

1. Wall area where CWS surround is placed and CWS surround must both be **clean and dry**. Insure wall area is free of any protruding objects (nails, staples, etc.)
2. Cover tub/shower pan to protect surface and minimize cleanup.
3. Measure up from the deck of the tub 57" for a tub surround and 67" for a shower pan surround. Apply a 1/4" bead of H.B. Fuller full grip mastic adhesive in a vertical or horizontal direction along or on top of each grout line, thus creating a grid on the wall where the surround will be adhered.

Note: If using STA-PUT Spray Adhesive, coat both the alcove wall and wall surround – see STA-PUT instructions.

4. Side Panels: Set bottom of panel on deck of tub/shower pan and align edge of tile with front apron flange of tub/shower pan. Starting from the bottom of the panel, firmly press from center to edges and work upward. Pull panel away from wall, reposition and repeat installation.


5. Back Panels: Set bottom of panel on deck of tub/shower pan and center panel between tub/shower pan flanges. Firmly press from center to edges starting from bottom of panel. Pull panel away from wall, reposition and repeat installation.

Note: Use roller on side and back panels to remove all air and to insure complete contact of adhesive.

6. RWS Surrounds Only: At this time drill oversized hole for rivet. Apply small amount of caulk on hole. Insert rivet and lightly tap drive pin until flush with rivet head.
7. Corner Caddy Installation: (Note: 3232 Shower Surround utilizes shower cove instead of caddies).
 - a. Wall panel must be clean and dry.
 - b. To insure proper fit, test fit the caddy prior to installation.
 - c. Apply 1/4" bead of adhesive strategically on back of caddy.
 - d. Remove paper from self-adhesive strips on caddy edges.
 - e. Insure that contact area of surround panels is clean and free of dust & dirt before adhering the corner caddies.
 - f. Place squarely in corner with bottom of caddy sitting firmly on tub deck.
 - g. Press firmly creating solid bond to wall surround panels.
9. After tub/shower pan and surround have been cleaned and free of dust, insure that installation is watertight.



Better Bath
COMPONENTS

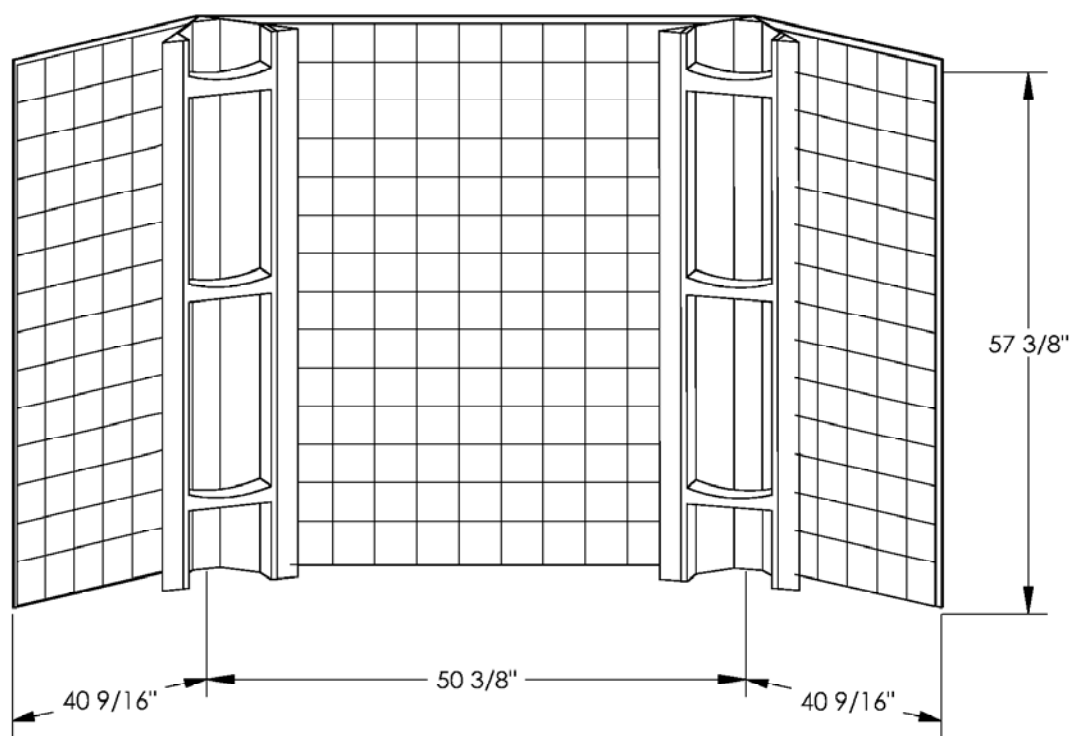

- 1) Surround is for 40"x54", 40"x60", 42"x60" and 46"x60"
- 2) 260C Caddies required - sold separately

CWS-42GT

Multi-Piece Surround

Better Bath Components

CWS Multi-Piece Surround

Installation Instructions

1. Wall area where CWS surround is placed and CWS surround must both be **clean and dry**. Insure wall area is free of any protruding objects (nails, staples, etc.)
2. Cover tub/shower pan to protect surface and minimize cleanup.
3. Measure up from the deck of the tub 57" for a tub surround and 67" for a shower pan surround. Apply a 1/4" bead of H.B. Fuller full grip mastic adhesive in a vertical or horizontal direction along or on top of each grout line, thus creating a grid on the wall where the surround will be adhered.

Note: If using STA-PUT Spray Adhesive, coat both the alcove wall and wall surround – see STA-PUT instructions.

4. Side Panels: Set bottom of panel on deck of tub/shower pan and align edge of tile with front apron flange of tub/shower pan. Starting from the bottom of the panel, firmly press from center to edges and work upward. Pull panel away from wall, reposition and repeat installation.
5. Back Panels: Set bottom of panel on deck of tub/shower pan and center panel between tub/shower pan flanges. Firmly press from center to edges starting from bottom of panel. Pull panel away from wall, reposition and repeat installation.
Note: Use roller on side and back panels to remove all air and to insure complete contact of adhesive.
6. RWS Surrounds Only: At this time drill oversized hole for rivet. Apply small amount of caulk on hole. Insert rivet and lightly tap drive pin until flush with rivet head.
7. Corner Caddy Installation: (Note: 3232 Shower Surround utilizes shower cove instead of caddies).
 - a. Wall panel must be clean and dry.
 - b. To insure proper fit, test fit the caddy prior to installation.
 - c. Apply 1/4" bead of adhesive strategically on back of caddy.
 - d. Remove paper from self-adhesive strips on caddy edges.
 - e. Insure that contact area of surround panels is clean and free of dust & dirt before adhering the corner caddies.
 - f. Place squarely in corner with bottom of caddy sitting firmly on tub deck.
 - g. Press firmly creating solid bond to wall surround panels.
9. After tub/shower pan and surround have been cleaned and free of dust, insure that installation is watertight.